


Update the Firmware of a Digitronic ECU

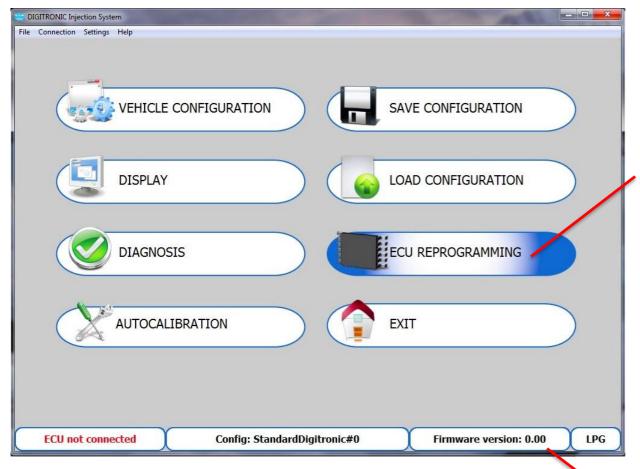


- 1. Connect the ECU via Digitronic USB Interface to the Laptop
- 2. Start the Digitronic software on the Laptop
- 3. Click on "ECU PROGRAMMING"

Here you can see the actual ECU Firmware if the ECU is connected properly

DIGITRONIC

Update the Firmware of a Digitronic ECU

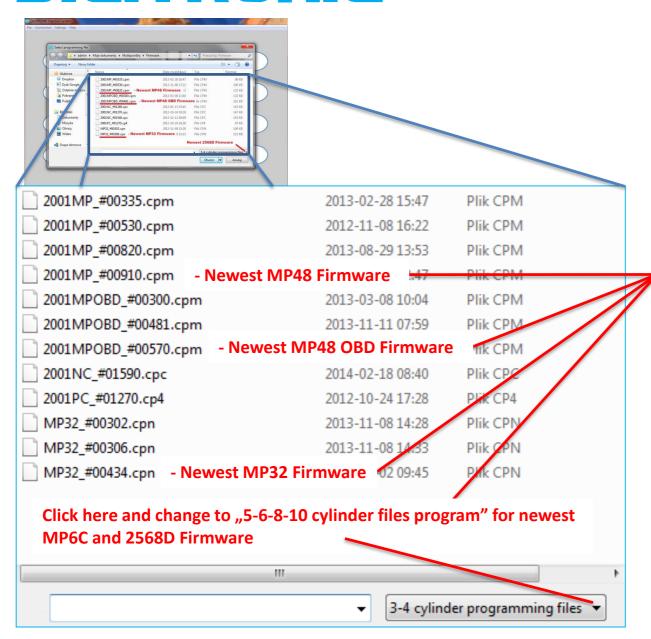

- 1. Connect the ECU via Digitronic USB Interface to the Laptop
- 2. Start the Digitronic software on the Laptop
- 3. Click on "ECU PROGRAMMING"
- 4. Choose the newest Firmware for the right ECU
- 5. Wait till the Digitronic software do the update
- 6. Done

Warning: Cutting connection to ECU during update may block the ECU permanently.
Unlocking the ECU is only possible at a Digitronic facility. Additional fees will be applied for this service.

LPG / CNG EQUIPMENT